

Manufacturer: Pactech Packaging LLC
Model: CRREO Pouch, MEDI-CRREO Zipper Pouch
ASTM Type: XIA

Description:

This is a flexible reclosable pouch (Figure 1).



Figure 1

There two versions of this package, one is for any product the CRREO Pouch (Figure 1) and the other is the MEDI-CRREO Zipper Pouch for pharmacists (Figure 2)

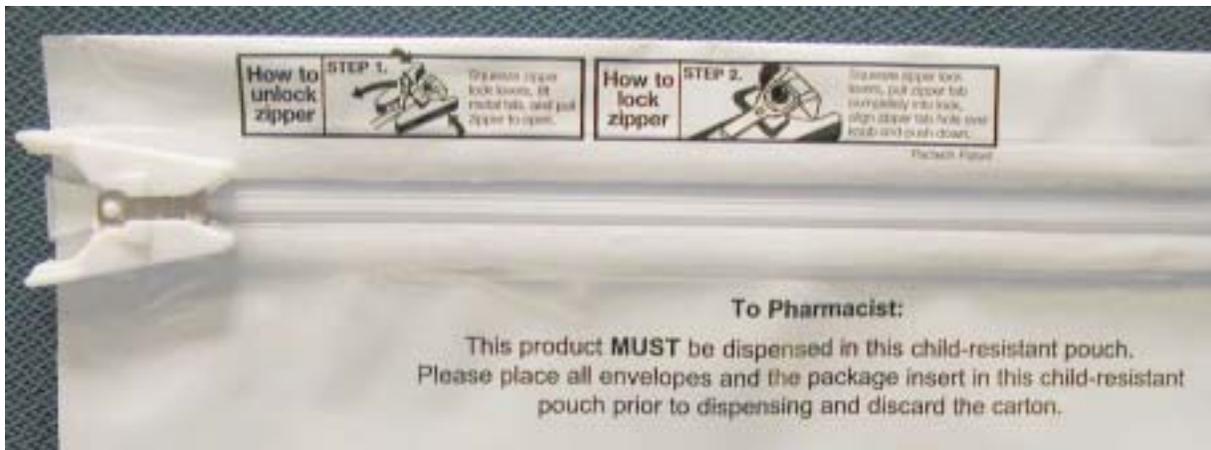


Figure 2

Both the CRREO Pouch and the MEDI-CRREO Zipper Pouch packages open and close the same way. Both packages consist of a pouch with a zipper, a zipper tab, a knob, and two lever locks. The zipper tab has a hole in it that fits over the knob in the locked position. The package is opened by squeezing the two lever locks around the zipper tab, lifting the zipper tab off the knob, and pulling the zipper to open (Figure 3).



Figure 3

The package is closed by reversing the procedure, squeezing the two lever locks around the zipper tab, pulling the zipper tab into the lock aligning the hole in the zipper tab with the knob, pushing down and then releasing the two lever locks.

The manufacturer's instructions vary slightly for the two pouches. The manufacturer's instructions on the front of the CRREO Pouch are (Figure 1):

How to Unlock Zipper

STEP 1. (picture of the zipper tab lifting off the knob and the two lever locks being squeezed in)
SQUEEZE ZIPPER
LOCK LEVERS, LIFT
METAL TAB AND
PULL ZIPPER TO
OPEN.

How to Lock Zipper

STEP 2. (picture of the zipper tab on the knob between the two lever locks)
SQUEEZE ZIPPER LOCK
LEVERS, PULL ZIPPER
TAB COMPLETELY INTO
LOCK. ALIGN ZIPPER

TAB HOLE OVER KNOB
AND PUSH DOWN.

The manufacturer's instructions on the front of the MEDI-CRREO Zipper Pouch are (Figure 2):

How to unlock zipper

STEP 1. (picture of the zipper tab lifting off the knob and the two lever locks being squeezed in)

Squeeze zipper
lock levers, lift
metal tab, and pull
zipper to open.

How to lock zipper

STEP 2. (picture of the zipper tab on the knob between the two lever locks)

Squeeze zipper lock
levers, pull zipper tab
completely into lock,
align zipper tab hole over
knob and push down.

To Pharmacist:

This product **MUST** be dispensed in this child-resistant pouch.
Please place all envelopes and the package insert in this child-resistant
pouch prior to dispensing and discard the carton.