

Manufacturer: Ropak Packaging
Model: EZ STOR®
ASTM Type: IIID(6)

Description:

The package consists of a plastic rectangular open head pail and a hinged pail lid with hooks that snap into the slots on the pail in one orientation to fit together (Figure 1). Two hooks (one per side) on the pail lid fit into slots at the back of the pail. This results in the pail lid being permanently attached to the pail. To access the contents once the pail lid is permanently attached the child resistant feature must be used to open the lid.



Figure 1

The package is opened by first removing the tamper-evident tear strip (Figure 2). The tamper evident tear strip is removed by pulling one or both rings at the ends of the strip (one on each side of lid).



Figure 2

Next one hand is used to press and hold the bottom tab (see arrow in Figure 3) while the other hand lifts out lever latch tab to open the lid.





Figure 3

Once the tab on the lid is lifted, the lid itself may be opened. (Figure 4).



Figure 4

The manufacturer's instructions on the pail and lid are (Figure 5A, B, C and D):
"TEAR >>>" (on tear strip next to each ring pull, Figure 5A)
"1. PRESS & HOLD" (on pail, Figure 5B)
"2. LIFT OUT" (on pail, Figure 5C)
"3. RAISE UP" (on lid, Figure 5D)

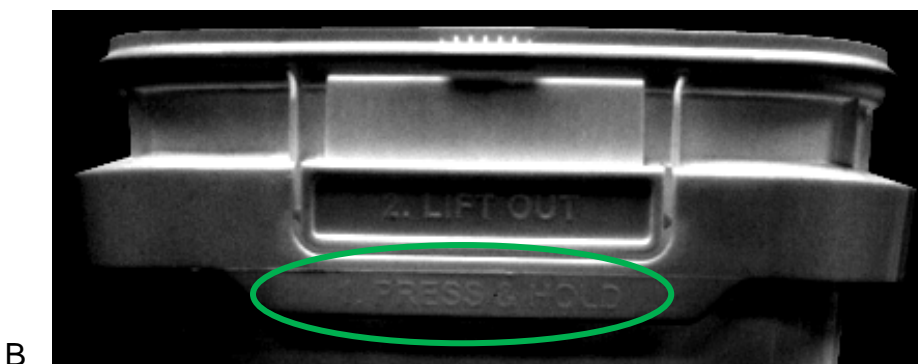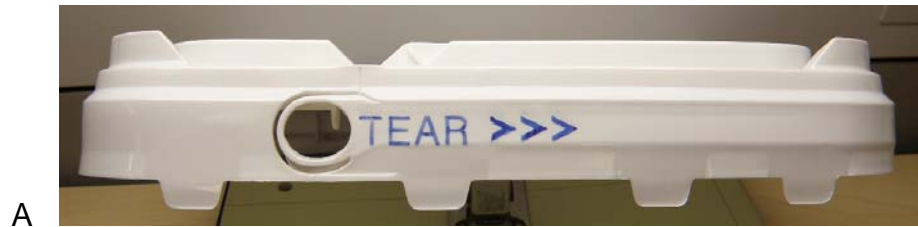

(Shading added to make text "1. PRESS AND HOLD" visible in photograph.)

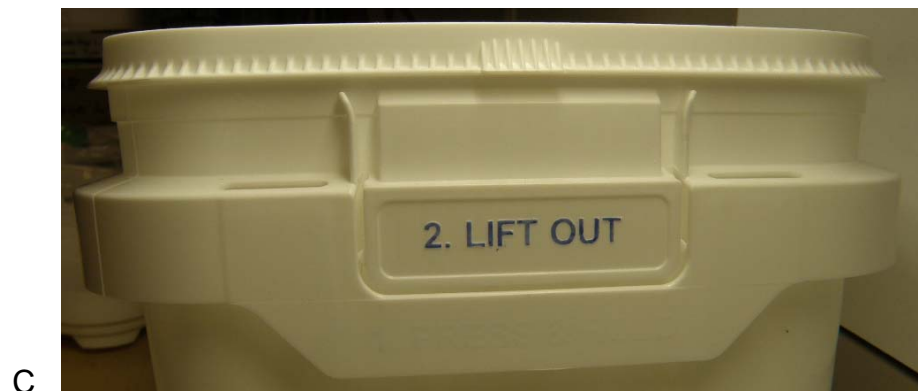


Figure 5

Closing instructions are located at the spot where the lid is pressed down to close. The instructions read (Figure 6):

**“TO CLOSE PRESS HERE
ENSURE FLAPS ARE IN”**



Figure 6